


IMPORTANT Safety, Warning and Suggestions


1. Qualified electrician is required to install this product/s.
2. Please read instructions carefully before installation.
3. All wiring and installations should meet local, state and national electrical codes.
4. Install correct lamp type and wattage.

Arm Mount with Wall Plate

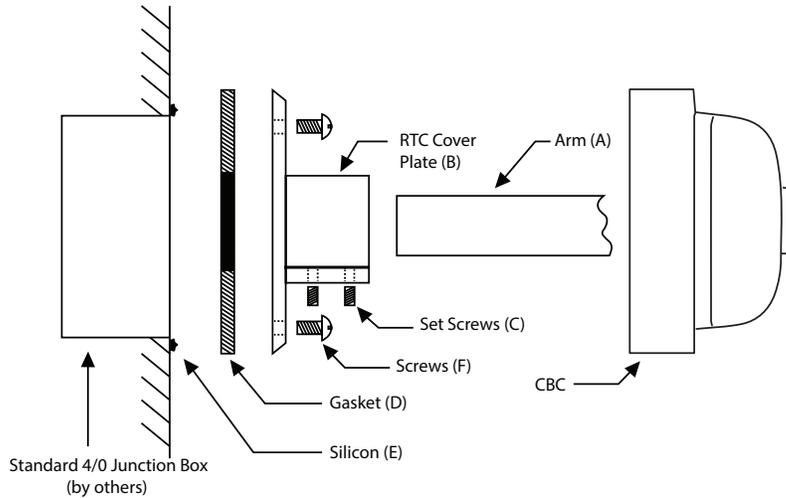

1. **Prior to installation, disconnect power at main electrical box.**
2. Verify that lead wires from shade are long enough for arm (A) provided.
3. Feed lead wires through arm and thread shade onto arm.
4. If Cast Back Plate Cover (CBC) is provided, slide over arm (A).
5. Place arm into cast back plate (B) and tighten set screws (C). Set gasket (D) in place.
6. Make wiring connections according to national and local codes.
7. Apply a bead of silicone sealant (E), provided by others, around junction box on wall/ceiling.
8. Attach cast back plate with arm assembly to junction box with screws (F) provided. Tighten screws evenly to assure proper seal.
9. With cast back plate mounted, loosen set screws (C), adjust arm to correct position and re-tighten set screws. Use Loctite for most secure connection.
10. If provided, place CBC over cast back plate (B) and tighten set screw.

Arm Mount with RTC

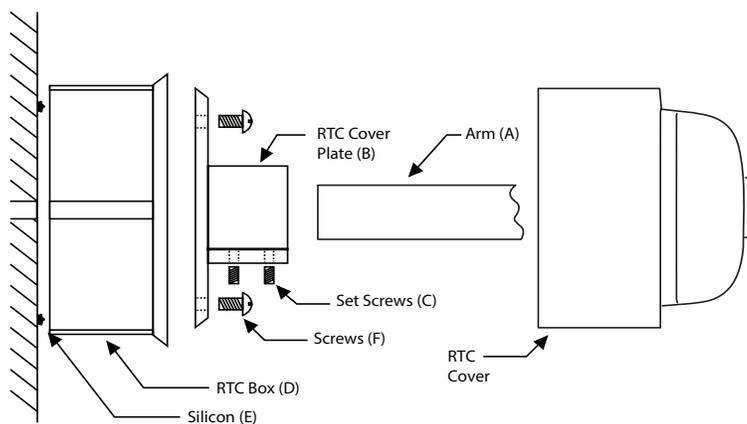

1. **Prior to installation, disconnect power at main electrical box.**
2. Verify that lead wires from shade are long enough for arm (A) provided.
3. Feed lead wires through arm and thread shade onto arm.
4. If RTC Spun Cover (RTC) is provided, slide over arm (A).
5. Place arm into RTC cover plate (B) and tighten set screws (C).
6. Drill additional holes in RTC box (D) as necessary for mounting, keeping holes at least 1/2" from edge of box.
7. Apply a bead of silicone sealant (E), provided by others, around back of RTC box, near the outer edge. Attach to wall.
8. Make wiring connections according to national and local codes.
9. Attach RTC cover plate with arm assembly to RTC box with screws (F) provided.
10. With RTC cover plate mounted, loosen set screws (C), adjust arm to correct position and re-tighten set screws. Use Loctite for most secure connection.
11. If provided, place RTC Spun Cover over cast back plate (B) and tighten set screw.